


THERMOBILE®

BA 9

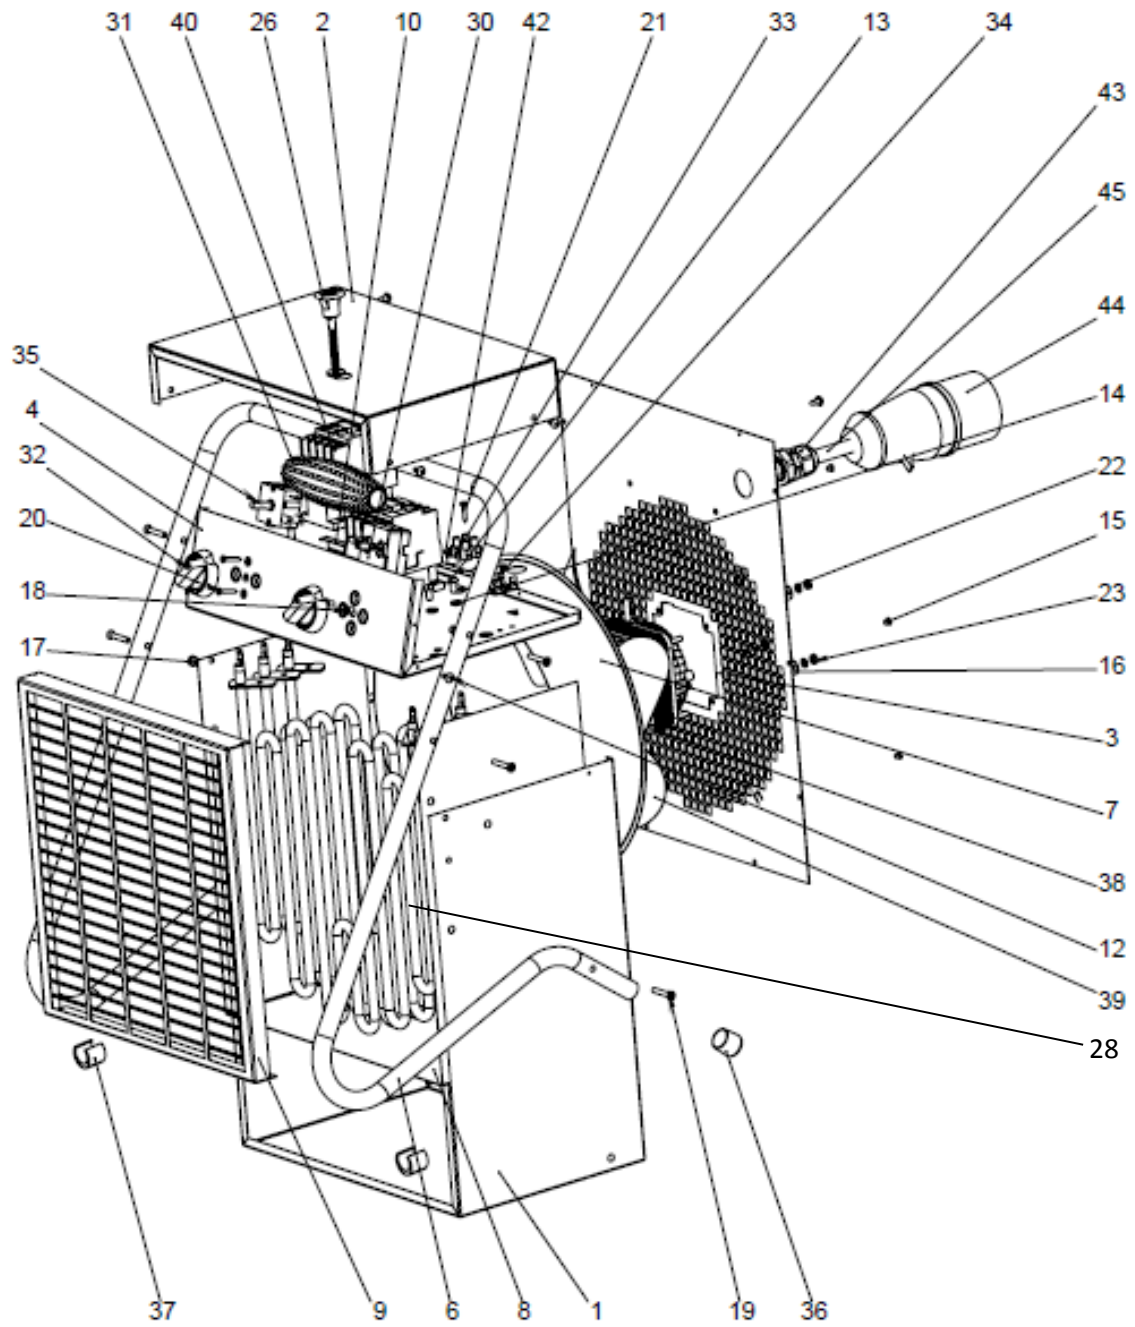

Position	Référence	Désignation	Quantité
	BA9.8	Thermostat de surchauffe	1
1			1
2			1
3			1
4			1
5			1
6			1
7			1
8			1
9			1
10			1
11			8
12			8
13			6
14			6
15			10
16			4
17			6
18			2
19			6
20			2
21			1
22			4
23			4
24			3
25			1
26	BA9.23	Bouton reset	1
28	BA9.11	Résistance	3
29			1
30	BA9.10	Thermostat ambiance	1
31	BA9.25	Poignée	1
32	BA9.9	Bouton thermostat et interrupteur	2
33			1
34			1
35	BA9.33	Interrupteur 3 positions	1
36			2
37			2
38	BA9.27	Moteur	1
39	BA9.37	Ventilateur	1
40			2
41			1
42			1
43			1
44			1

45			1
----	--	--	---